USER MANUAL

Dreamsky NXP256HD



Content

Safety Precaution	2
1. Reference	
1.1 General Features	3
1.2 Accessories	4

2. Basic Function

2.1 Front Panel		5
2.2 Rear Panel		5
2.3 Remote Con	Itrol Unit	6

3. Installation and Connection

3.1 Connecting to TV	7
3.2 Connecting to Dish	LNB8

4. Installation and Operation

4.1 Installation	9
4.2 Channel manager	13
4.3 System setting	14
4.4 Youtube	16
4.5 Weather forecast	18
4.6 Network	18
4.7 USB control	20
4.8 Games	23
4.9 Other useful information	24

5. Additional Information

5.1	Problem Solving	27
5.2	Technical Specification2	28
5.3	Glossary	30

Safety Precaution

This STB has been designed and manufactured to satisfy the international safety standards. Please read the following safety precautions carefully before operating this receiver.

Main Supply:

Before operating, please check the units operating voltage is 90~250V AC 50/60Hz.

Overload:

Do not overload a wall outlet, extension cord or adapter, neither use damaged power cord or touch it with wet hand as this may result in electric shock.

Liquid:

The receiver shall not be exposed to dripping or splashing water, and that no objects filled with liquids, such as base, shall be placed on the apparatus.

Ventilation:

Keep the slots on top of the receiver uncover to allow sufficient airflow to the unit. Do not put the receiver on soft furnishings or carpets. Do not expose the receiver to direct light or do not place it near a heater or in humid conditions. Do not stack other electronic equipments on top of the receiver.

Cleaning:

Plug out the receiver from the wall outlet before cleaning. Clean the receiver by a soft cloth or mild solution of washing-up liquid (no solvents).

Connection:

Disconnect the receiver from the mains when you connect it to satellite LNB or disconnect it from LNB. Failure would possibly cause damage to the LNB.

Location:

Put the receiver indoor in order to avoid lightening, raining or sunlight.

Uncover:

Do not remove the cover, to reduce the risk of electric shock. Contact qualified and licensed service personnel to repair the receiver, or contact your dealer.

1. Reference

1.1 General Features

DVB-S/DVB-S2 Satellite Compliant (MPEG-II/ MPEG-IV/ H.264)

SCPC & MCPC receivable from Ku and C band satellites

Universal, Single, Single S & C Band Wideband LNB

Sensitive Tuner with Loop-Through

DiSEq C 1.0/1.1/1.2/1.3 (USALS)

Unicable Supported

Blind search supported.

Multi satellite search, network search, PID search, manual search and Multi-TP Search

Fast Scan on Astra (19.2)

Auto DiSEqC Search

PAL/SECAM/NTSC Conversion

Variable aspect ratio (4:3,16:9) with PAN& SCAN vector or letter BOX option

Output Resolution: 480p&480i,576p & 576i, 720p&1080i50Hz,720p

&1080i60Hz,1080P30Hz

True full Color (32 bits)on screen display (OSD)

Storing memory: 100 satellite, 4000 transponders and 10000 channels

Supported satellite add, delete, move, rename

Supported transponder add, delete, edit

8 favorite group and parental lock supported.

Supported programmed lock, delete, move, rename.

Supported multi-language menu (English, French, Russia, Greek, Italian, Arabic, Farsi, Ukraine, Swedish, Spanish, Turkish, German etc).

Supported list of programmers, have four sort function: FTA>ACS, satellite, transponder, alphabet.

Easy functions such as Group Move/ Recall History

Multi-language audio.

Multi-language DVB Subtitle output

7 days Electronic Program Guide (EPG)

Teletext output through VBI and OSD.

Multi-Picture supported

Software (data, kernel and file system) upgrade through USB or Ethernet

USB 2.0 Interface

1.2 Accessories

- Users manual
- Batteries
- A/V Cable
- Remote Control Unit



Figure 1.Accessories

2. Basic Function

2.1 Front Panel



- 1. Power LED Power indicator.
- 2. Signal LED Signal Indicator.

3. Display (VFD) - The VFD displays channel information. In Standby mode the VFD displays local time.

4. Power Button - The POWER button is used to turn the power on or to make it on Standby Mode.

2.2 Rear Panel



- 1. LOOP OUT Output the Dish LNB IN signal.
- 2. LNB IN Connect the Satellite Dish LNB.
- 3. RS232 Connect to serial port of PC for software upgrade.

4. AUDIO, VIDEO - Connect to Audio/Video of TV. Connect Yellow to Video port, connect Red and White to Audio Right and Audio Left.

- 5. USB2.0 One USB 2.0 Host Port.
- 6. TV SCART Connect to TV set with Scart cables.
- 7. COAXIAL Digital Audio output. 8. DV-OUT HD signal output.
- 9. LAN LAN for Ethernet.

2.3 Remote Control Unit (RCU)

You can control this receiver by this remote controller with full function.

- 1.TV/R Switch between TV and RADIO.
- 2. POWER _ O Switch the receiver on or off.
- 3. MUTE O Turn the sound On/Off.
- 4. DISPLAY Switch the TV type.
- 5. MODE Switch 4:3 & 16:9 Screen Formats.
- 6. TIME Setup event timer.
- 7. F1 No function
- 8. AUDIO Select or change the Audio.
- 9. PAUSE Freeze the picture.
- **10. ZOOM** Picture Zooming function.
- 11. INFO Show the info of the current channel.
- 12. NUMERIC KEY Change program or input nr.
- 13. RECALL Move to the previous viewed channel.
- 14. SAT Show the scanned satellite list.
- 15. MENU Activate MENU or exit to live channel.
- 16. EXIT Exit current menu step by step.
- **17. CH**◀ / ► Change program.
- **18. VOL** ▼ / ▲ Change volume in view mode.
- 19. OK Confirm the highlighted menu item/PR LIST
- 20: SUB Subtitle info if the channels contains.
- 21. EPG Show the TV/Radio program guide.
- 22. FAV To get favorite channel list you set before.
- 23. TXT Show the teletext content if teletext is transmitted.
- 24. VOL +/- Change volume in viewing mode.
- 25. FIND Quickly find channels
- 26. E Activate multi picture menu and select picture
- 27. PAGE+/- Page up/down on menu.
- 28. SLEEP Setting the time for turning the receiver off
- 29. USB Enter USB
- 30. ◀◀ Fast backward
- 31. **>>** Fast forward
- 32. ► Start playing / Release pause
- 33. Stop recording
- 34. I◀◀ Play previous item
- 35. I Play next item.
- 36. I I Pause/time shift
- 37. Start recording



3. Installation and Connection

The following diagram shows you the connections among receiver, TV, LNB and other equipment, please read this first if you are not sure about the connection, and it will guide you to the correct connection.

3.1 Connecting to TV



3.2 Connecting to Dish LNB

You can connect one fixed dish LNB directly to the LNB IN, or connect at least two dish LNB by DiSEqC Switch, you can also connect to HH mount dish LNB.



NXP HD | 8

4. Installation and Operation

After connecting the receiver to other required equipment, turn on the receiver, there should be no channel information available at the first startup, you need to follow the procedure to setup your receiver to search the channel.

Main Menu

Press MENU button to activate main menu, main menu consists of Installation, Channel manager, system setting, Youtube, Network,

USB Control, Games.



. Use UP/DOWN button to select your subject and press OK to confirm your selection and enter that sub menu, press EXIT button you can return to the previous menu.

4.1 Installation

Select Installation, press OK button to activate Installation menu, the Installation window will be displayed.



A: Antenna Setting

Press OK to Enter Antenna Setting; here you can make Satellite Search, Satellite Edit, blind Search and other Functions.



NXP HD

Т

a: Satellite List

Enter this picture, you can see the presorted Satellite list, in this menu, you can add, delete Satellites.

1	03680		Frequency	(1)	3680	0
2	03706		Polarisation	1	HOR	12
3	03725	2	Symbol rate	(11)	26670	0
4	03720	2	FEC	1	3/4	-12
5	03732	>	Tp Search	210	14	633
6	03739	3				
1	03745	3				
8	03750		Quality .	_		
9	03755	>	Strength			
10	03760	2				
	Delete	Add	Edit Pil	_	Start Sear	ch

b. Delete

You can delete the user satellite. Press the **OK** button select the satellite that you want to delete from the satellite list. You will be asked to confirm whether delete the satellite or not. If you select YES, all the channels in the selected satellite and transponder will be deleted. Press **OK** key, and the selected satellite will disappear.

c. Add

Select the Add using the Left/Right keys. Here you can input new Satellite angle, Satellite Direction (east, west), Band (ku, c). **OK** to confirm the setting and this new satellite will be added to the end of the Satellite list.

> TP Setup

If you change the satellite, the transponder will be changed automatically. You will find the transponder list of selected satellite here In this menu you can Delete, and Add Transponder. The Operation similar to the above, you can input the transpond frequency symbol rate, choose polarization (Ver, Hor) and Auto (1/2, 2/3, 3/4, 4/5, 5/6,)

Use this in case of a specific Transponder which has non-DVB standard channels and which can only be found when you have entered the necessary settings. Only need input PCR& Video& Audio PID is ok. You also can delete & add & rename the channels from a specific TP.



LNB frequency and power

Here you need to check the LNB frequency according to your antenna, set the correct frequency or define yourself, and keep LNB power to be 13V/18V or 14V/19V.

DiSEqC type DiSEqC1.1

If you connect antenna to DiSEqC Switch, you need to specify the DiSEqC input to which your selected satellite have been configured.

> 22KHz

In case you are using two antennas connected to a 22KHz tone switch box. You can supply either 22KHz by setting "ON" or "OFF" to select antenna.

81 C_AsiaSat 2 (100.5E)	5	Transponder		4132	
82 C_AsiaSat 35 (105.5E)	- >	Motorised System		1	ile.
	2	LNB Freq	6	5150	
	×.,	DiSEqC type	6	None	
	>	DISEqC 1.1	6	None	1
	5	Network search		OFF OFF	13
	.3	226912		OFF OFF	
	3	LNB Power	12	13V/18V	
	>				
	1				

Start Search After setup and so button will star searching the TV channel will be lister

TV DS (Ť	Rado [13]	(0)
8 FardaVOA/RFE Radio 4		6 Mandarin/Tibetan	>
9 Farda Radio 404		7 Ozodik Radiosi	
0 IBB VOA RFE/RL Radio	- <u>3</u>	8 Azattyk unalgysy	
1 IBB VOA RFE/RL Radio	3	9 Radio Tavisupleba	5
2 VOA IOR TV 409	1	10 Radio Svoboda	
3 IBB VOA RFE/RL Radio	3	11 Azatlıq Radiosi	
14 VOA Persian TV 415	ŝ	12 Azatlyk Radiosy	2
IS VOA IOR TV 535	2	13 Radio Ozodi	×
	37%	9	-

NOTE: if you don't know any message about the satellite you can press the **Yellow** key using blind search.

B: Fast scan

In this view, when base on the the 22000, H, 5/6), ca by different provide

Satellite name Atros 1 (19 2E) Framponder Site (123 151 1/22000/ CHS Renumber ON	Toyklor	Canal Digitaal	.0
Transponder [69] 12515/122000/ 2HS Renumber (0H)	Satellite name	Astra 1 (19.2E)	
CHS Renumber	Fransponder	[68] 12515/1/22000/	D

C:USALS Setup

You can setup th satellite you want check the detai internet and input t about your local po

	Longitude Angle	- (g)		
	Longitude Direction	6	East	
th	Labitude Angle	(11)	63.0	3
un	Latitude Direction	6	North	12
nt	Rotating Speed (S/*)	00	0.30	>
tai				
ıt t	Setup By Country	-		
posno	511.			

🤏 USALS Setup

Press the Reach choose the country you will view the cit you select.

	Turkey		
3	Sweden	5	
4	Norway	>	
5	Denmark	-	
6	UAE		
7	Ukraine		
8	Belgium		

4.2 Channel manager

In this menu you can edit channels &fav, or sort channels and so on.



A: Edit channel

Here you can Select Channel and Delete/ Un- delete Channel, Rename Channel, Move Channel, Lock Channel, Select TV Channels, you will get this window. You also can group move the channel.



B: Edit fav

Here you can set the channel to favorite in differ- ent category, such as news, movies, music, sports, education, weather, children's, social, culture. Press different function color button select any sort press **OK** on viewing mode you can set the channel type according your mind.



C: Sort channel

In this menu you can sort the channels in different type, such as language, FTA, satellite, transponder, favor and Alphabet



D: Delete satellite channel

In this view, you can delete satellite channels press OK you will be asked to confirm whether you select "YES" or "NO". If you select "yes" all data under this satellite will be lost.

E:Factory Default

You can erase all the channels and settings. You made by selecting All, press OK you will be asked to confirm whether you select "YES" or "NO". If you select "yes" all data and setting will be lost. (as well as r adio list and scramble). In the end, you also can save or load default Date





F: User channel list

In this menu, you can save and load the channel list .



4.3 System setting

A: System

You can setup the menu language, audio language according to the standard of your country. You also can set the recall list, volume per channel function on or off.



B: OSD

Here you can setup the menu background, transparency and color, and help information for menu, Time out means the duration of the information bar. You also can setup the HDMI, press **Right /Left** button, you will change the HD format from 1080i to 720p/576I. After you confirm, the TV Type can be changed

	64	11	- 6
XT Transparency	6	10	1
ime Out	6	3 Sec	- E
V System	6	PAL	1
IDMI Mode	6	720P50	- R
V Screen Format	8	4:3 Pan & Scan	1
icart Output	6		
V Screen Format	G	4.3 Pan & Scan CVBS	

C. Timer Adjust

1: Timer Setup

The default time setup is auto, you can select manual and input by hand, select the time zone of your country and you will get the correct current time which is based on TDT (Time and Data Table) in the stream of the current channel service.



The time you set will be shown on the front panel when you set receiver to standby mode.

2: Event Timer

Here you can set the channels that you likes, so the customized time to jump the designated program. You also can customized time to record the designated program, you set including both TV and Radio, you can add, edit and delete the timer event.



Note: You can add multi-groups in event timer.

3: Sleep Timer

Here you can set Sleep timer and this will enable receiver to sleep automatically according to the time you set.

D: Parental control

This function prevents children or unauthorized

persons from watching programs. You can select if need the password or not for Installation, Edit Channel and System, also you can change the Password, the default password is 0000.. When you choose yes, you can "change the password option to unlock or lock some menu enter





E: About STB

In this window, you can get the information about the STB, such as product name, software & hardware ver, loader ver and so on. When you need service from the dealer you need to submit this information in order go get the correct and fast after sales service.

4.4 You Tube

Enter this view, you can view the program on line





1. You Tube

Enter this view, you can view the program on line



Proxy Setting

2》Proxy Setting

Enter this view, press the OK button input the word which you want, press the red button, you can get the ping information

3 SMB File Setup

Enter this view, put in the windows share address such as 192.168.0.45/bt, user name and password, select the SMB Enable ,you will be ask whether enter the file yes or no, after select yes, then press red button link to the windows share.

1) After above step, enter the USB menu, you can glance over the file of the windows share, if have media file, you can play it ,the operation like 4.4 USB.

2) And other function, set record patch, you can record USB file to the windows file like the picture.

 SMB File Setup

 Blare Addess.
 www.gocje.com

 User Nome
 Gaast

 Pastword

 Exable
 NO



4.5 Weather forecast

Brand new submenu at your receiver. Check the MENU and find the weather forecast for your region. It is necessary to be connected via internet.



4.6 Network

1> Wireless setting:

In this view, you can set the wireless by two step

2 > IP Situation

In this view, you can check the IP address and the situation of the net whether connect **by wireless net**.



First of all, search wireless networks, then you can select the wireless pointer, press "Ok", you can input wireless password and verify it. If the password is ok, it will auto connect the wireless net, then you can enter IP Setting menu to check the situation of the connection,.





2. internet Radio

In this view, you can listen radio online, First, select the country, then the music radio lists will be show



3. Web Browser

After IP Setting, press the web browser, you can enter the net world.

4. VFTP

VFTP Download s/w, channel data, music, picture, media files. Visual FTP to list all the FTP folders and files, user can select the file to downloading into memory (like picture music) and USB (like movie and so on). You can see current directory path display on the top part.



5. IP setting

In this view, you can connect the network set some IP parameter.

The default setting is DHCP, you can set DHCP is on or off by Green key.

DHCP: IP-subnet mask and Gateway are not set because the DHCP server assigns these parameters.

Static IP: The system's IP-address, IP-subnet mask, DNS and Gateway must be specified in the IP-address.

. Set DHCP is on, and press the **Blue** key, start auto search IP, you will be asked to confirm whether continue, select yes, the receiver will reboot. Press **Red** key save IP set



4.7 USB Control

Here you can enter the USB menu, and also can set some net parameter and browse web view

A: USB menu:



Press **USB** key to enter USB menu. The current directory path display on the top part of the menu. The default file list is composed of all files and subfolders in the current path.

All supported files can be opened by pressing OK key, and these files such as*avi*. mkv*. mp4*. mov* 3gp*. mpg*. ps*. vob*. dat* .ts*. m2ts* .flv*. asf*. jpg,*. bmp, png, gif mp3 and so on . You also can play stream and picture.

1		10	1	100	1	10	10
		Stream	Movie	Music	Picture	Software	Other
	C)				•	sda1(C:)	NTES
4 4	D: E:					Free space:	115.68GB
-	E:				2	Total space:	117.19GB
					- 2		
	Play Lis		Help	_	Upload		AI.

- 1) Press Blue button display the all information
- 2) Press Green button get help message.
- 3) Press Yellow button upload the software.
- 4)press RED button get the play list
- Supported video format: MP4/3GP/MPG/AVI / MKV /MOV/TS/ VOB/ DAT/ M2TS/ FLV/ ASF
- Supported audio format: MP3/PS.
- Supported picture format: JPG/BMP/ PNG/GIF.

A-1 : Play Stream

- > OK : View play list / Play the selected file in play list
- Image: Play the selected file in play list / Resume playing file
- Stop playing file

- ► I < < : Play the previous item</p>
- I: Play the next item
- ➤ ◀◀ : Fast backward
- Fast forward
- > II/PAUSE : Pause
- > \triangleleft / > : Adjust volume
- ≻ 【0】: Jump
- **EXIT** : Exit play list menu / Exit playing state and return to file list menu.

A-2 : Play Movie

- > OK : View play list / Play the selected file in play list
- > > : Play the selected file in play list
- > Image: Fast backward
- Fast forward
- ► I < : Play the previous item</p>
- > **>**I: Play the next item
- **EXIT** : Exit playing state and return to file list menu
- ▶ 【0】: Jump
- > **EXIT** : Exit play list menu / Exit playing state and return to file list menu.

A-3 : Play Music

- > OK : Play the selected file in play list
- ► I < : Play the previous item</p>
- > **I** : Play the next item
- ► ◀◀ : Fast backward
- ► ►► : Fast forward
- > II/PAUSE : Pause
- ➤ ◀ / ► : Adjust volume
- > EXIT : Exit playing state and return to file list menu

A-4: View picture

- > **OK** : View play list / Play the selected file in play list
- ➤ ◀ / ►: rotate.
- ► I < < : Play the previous item</p>

- > **I** : Play the next item
- ➤ ▲/▼ : Play the previous/ next item
- EXIT : Exit playing state and return to file list menu

A-5: Download Software/Database

- 1) Press ◀ / ► key to switch to "Software" file list of the current folder
- 2) Press OK key to open and download the selected file

B.USB Manager:

In this menu, you can edit the files:

Press the **Red** button rename the files
 Press **Green** button delete the folder or files

3) Press **Blue** button format disk

4) Press **Yellow** button set recording path and create the files



> USB PVR:

When you use USB devices such as USB memory stick, or USB interface hard-disk drive (HDD) with this receiver, Watching one channel (FTA/Scramble) and Recording another channel (FTA/Scramble) in the same TP. During recording, can switch the channel in the same TP Note: USB supported FAT & FAT32 Ext2, Ext 3, NTFS

➤ Time shift

Press the I I button, enter the time shift function.

You can pause and resume a live television program, and even rewind and

replay it. When you are watching a program and you miss something, you can rewind and replay it. Or when your attention is needed elsewhere, you



can pause it and resume it a short time later without losing any of it. When you do this, you are no longer watching the live program; instead you are watching a delayed presentation of it. This is called time shifted television. Then, you can skip commercials until you catch up to the live broadcast.

With time shift enabled, the following operations are possible: To go back in time, hold down the ◀◀ button; to go forward, hold down the ▶▶ button.

Press the I I button again, pause the channels

í Press the Exit button, you will be asked whether exit or save the program data, select yes or no you want.



4.8 Games

1. Hexa Game You can see play Hexa on the screen. Press \triangleleft / \triangleright , \blacktriangle / \lor to play.



You can see play **Mine** on the screen. Press \triangleleft / \triangleright , \checkmark / \checkmark to play.

NXP HD





I.

4.9 Other Useful Information

This will guide you on how to use general info while watching TV program or listening Radio program.

➤ INFO:

In the viewing mode when you press **INFO** button, the info bar will pop up, it contains satellite and channel information, detailed



EPG info will display in the menu if press INFO again.

➤ SAT

Press **SAT** button on the remote control, you will get this menu which contains the satellites you searched and stored, select one satellite and press **OK**, all channels will be listed under that satellite you selected. Press **Red** button, you also can hide the satellite.



Recall

Press Recall button and you can get the viewed history channel. Maximum it

can list channels that you recently viewed.

> ZOOM

Picture zooming function.

≻ EPG

Press EPG button on remote control, you can get the electronic program guide if

applicable. You can get the detailed information about that program by pressing INFO.Press TV/RADIO to change to TV/RADIO. Press RED key to go to timer Active, timer Active's operation similar to the above Event Timer's functions. Press PageUp/PageDown to switch channels



Tou can Switch Day EPG and Weekly EPG by Pressing Red Key. In this menu, press Right/Left button, you can view the different time EPG of one day. In the end, you can get the detailed information about that program by pressing INFO Key.



≻ FAV

In viewing mode, you can get the favorite channel group by pressing FAV, press Right/ Left to change category. If you did not set favorite channel in advance, it will show with all channel.





25

Channel List-OK

In viewing mode press **OK** button and you will get this window.



1) Press the Red button, you can change the channel in different type, ALL, FTA, Scrambled HD.

2) Press the Green button, you can enter the favor menu

3) Press the Yellow button; you can watch the channels sort by alphabet A-Z

4) Press the Blue button you can edit the channels like delete/ move/lock/ rename.

► TXT:

Show the teletext content if teletext is transmitted.



5. Additional Information

5.1 Problem Solving

Problem	Possible causes	What to do
LED on the front panel fail to	Mains supply cable is	Check if the mains supply cable
light up/is not lit.	not connected.	is plugged into the power socket.
No picture or sound.	Satellite dish is not aiming	Adjust the dish. Check the signal strength
	to satellite accurately.	indicator in one of the
		channel search submenus.
	No signal or weak signal.	Check the cable connections ,LNB and
		other equipment connected to LNB &
		receiver, or adjust dish.
	The LNB is faulty.	Replace the LNB.
	The cable is faulty.	Replace the cable.
Bad picture/blocking	Satellite dish is not aiming to the	Adjust the dish.
error.	satellite accurately	
	Signal too strong.	Connect a attenuator to LNB input.
	Satellite dish is too small.	Change to a larger dish.
	LNB noise factor too high.	Change LNB with lower noise factor.
	The LNB is faulty.	Replace the LNB.
No startup menu on screen	The system is connected by	Switch the TV to the
after turning on STB for the	SCART cables and the TV is not	appropriate AV input.
first time.	in AV/ EXT mode.	
The remote control is not	Battery exhausted.	Change the batteries (both).
working.	Remote control is not	Aim the remote control at the STB.
	aimed correctly	Check that nothing blocks the front panel.
		Check if LED indicator on the front
	STB is in standby mode.	panel is showing the time, press the
		power button to switch off standby mode.
You have forgotten your		Contact the dealer or Service Provider.
password.		They will help you set it up again.
Poor picture quality or Less	Low LNB power or signal	Change the LNB power to 14V/19V in
channels in scanning.	loss in cable.	Antenna setup menu.

You might meet abnormal working of this STB with various reasons? Check it:

NXP HD I 27

5.2 Technical Specification

Tuner & Demodulator

Demodulation	QPSK ,8PSK
Frequency Range	950 MHz to 2150 MHz
Signal Level	-25 to -65 dBm
RF Impedance	75Ωunbalanced
LNB	3V/18V/OFF, Imax = 400mA
LNB Tone Switch	22KHz+/-2KHz, 0.6Vpp+/-0.2V
DiSEqC Control	Version DiSEq C 1.0/1.1/1.2/1.3(USALS)Compatible, Tone burst A/B
Symbol Rate	2.0~45 MS/s/s/SCPC,MCPC
FEC Decode & 8PSK	Convolution Code Rate 1/2, 2/3, 3/4, 5/6, 7/8,3/5, 2/3, 3/4, 5/6, 8/9, 9/10, automatic

MPEG

Transport Stream	MPEG-2 ISO/IEC 13818Transport stream specification
Profile Level	MPEG1,MPEG-2 MP@ML,H.264, VC1, DV, DivX, and MPEG4
Input Rate	80 Mbps for MPEG Transport Stream and 25 Mbps for DV streams
Aspect Ratio	4:3, 16:9
Video Resolution	1920 [1080i and 1280 [720p for HD video,720 [480p, 720 [480i, 720 [576i, and 720 [
	576p for SD video.
Audio Decoding	MPEG-2 layer I and II (Music cam), MPEG4 AAC and MPEG4 AAC-HE (AAC+), Dolby
	Digital (AC-3) with bit rates up to 640 K bits /s, LPCM up to 48 KHz,MP3.
Audio Mode	Single channel/Dual channel/Joint stereo/Stereo
Sampling	32, 44.1 and 48 KHz

A/V and Data In/Out Connector

TV SCART	RGB, CVBS, L, R out
3RCA	AUDIO L, R. VIDEO out.
RS-232C	RS232C D-sub male type.
LNB IF Input	F type, IEC 169-24 Female
LNB IF Output	F type, IEC 169-24 Female

NXP HD I 28

Power Supply

Input Voltage	AC 100 ~240V, 50/60Hz
Power Consumption	Max. 25 W
Protection	Separate internal fuse. Input shall have lightening Protection

Physical Specification

Weight (Net)	Around 14.61kg
Operating Temp	0□ to + 40□
Storage Temp	-40 to + 65

5.3 Glossary

Antenna

A device that collects and radiates electromagnetic waves. Includes a satellite dish and broadband antenna.

DiSEqC

DiSEqC(Digital Satellite Equipment Control)system, it is a communication bus between satellite receivers and peripheral equipment using only the existing coaxial cable.

DVB

The Digital Video Broadcast group was created to establish a technical framework for the introduction of digital video broadcasting systems.

LNB (low-noise block converter) or LNBF

An electronic unit mounted on the satellite dish. It receives the signals reflected by the dish and converts them to signals that can be used by the digital satellite receiver.

🗊 GHz

The prefix giga means milliard, and Hertz means cycles per second. Signals in the GHz range are often called microwaves.

MHz

The prefix mega means million, and Hertz means cycles per second.

MPEG

Moving Picture Experts Group. Established by the International Standards Organization to provide the basis for a picture coding and compression system.

Forward Error Correction(FEC)

A system of error control for data transmission.

Polarization

Polarization allows several programmers to be fit into the same frequency band. The signals from a satellite are transmitted either with linear (vertical or NXP HD \mid 30 horizontal) polarizations or circular (right or left) polarization.

QPSK(Quaternary Phase Shift Keying)

Phase-shift keying in which four different phase angles are used.

Transponder

An automatic device that receives, amplifies and retransmits a signal on a different frequency.

Symbol rate

Speed of the digital transmission

RGB

Red, Green, Blue. Color signals are routed in separate cables in order to provide a high quality TV picture.

Scrambled TV programmer

Some TV programmer are transmitted in scrambled form.

SERIAL RS 232

A serial communication standard data port.

SCART

A 21-pin connector used for connection of the Media master, TV. Also named Euro connector or Partial connector.

S/PDIF

Sony/Philips Digital Interface Format. Digital audio output.